


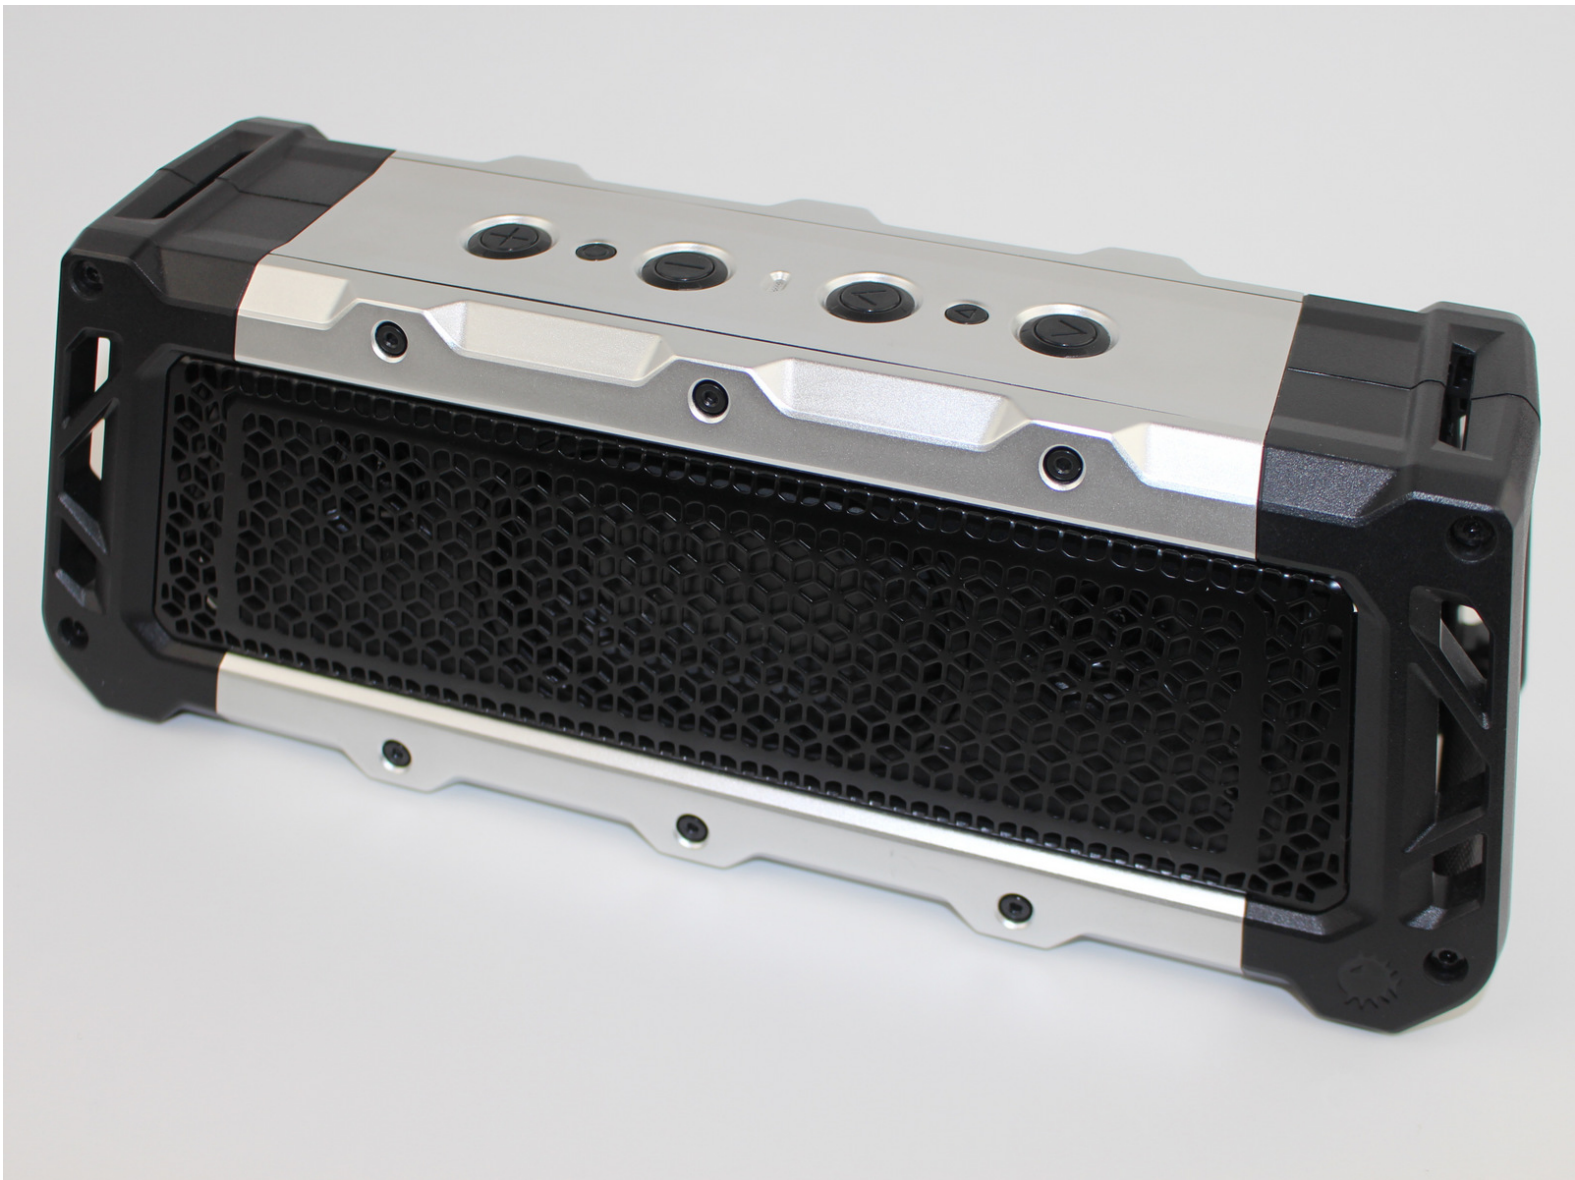

# Fugoo Tough XL Case Replacement

This guide would show you how to remove the front and back case.

Written By: Abdul



## INTRODUCTION

The Fugoo Tough XL speaker has an external shell that can be removed to make necessary repairs.


---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [T10 Torx Screwdriver](#) (1)
  - [3mm Hex Key \(or Bit\)](#) (1)
-

## Step 1 — Case

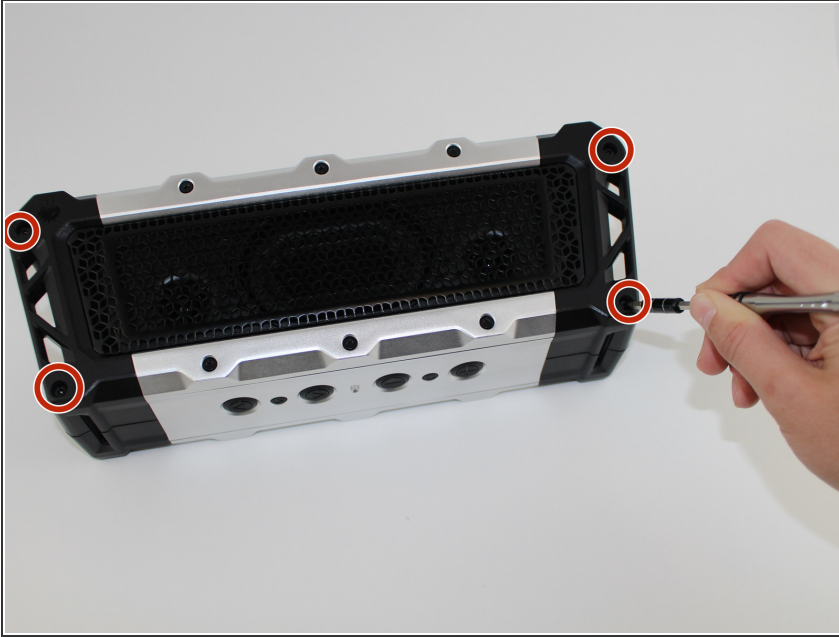

- Use a #3 Hex screwdriver to unscrew all four 3mm screws."

## Step 2



- Gently remove the outer shell.

**i** It should be relatively easy to pull apart. Don't be afraid to apply a necessary force.



## Step 3




- Pull out the device from the external case.
- Unscrew all 12mm T Head screws using a T10 screwdriver.
- Unscrew all 6mm T Head screws using a T10 screwdriver.

## Step 4



- Gently remove the side plates by using your hands to pull off.
  - Use plastic opening tool to pry off the back plate.
- ⓘ Work on the side with the Fugoo trademark.

## Step 5

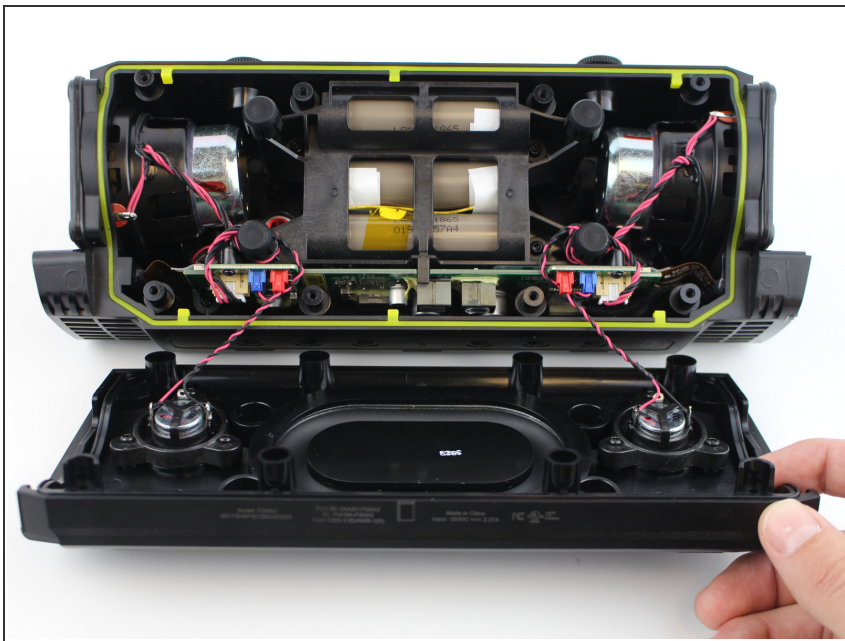

- Pull apart the front casing from the back casing, slowly. Try to avoid any tension on any of the connected cables.

⚠ Separate at a slow constant force to avoid damage to the speaker cables.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 08:32:55 PM.